



2-SLICE bread toaster

WITH VIEWING WINDOW

Perfectly toasted bread every time



BM-BT2018

INSTRUCTIONS MANUAL

www.baumannliving.com

TABLE OF CONTENTS

- IMPORTANT SAFEGUARDS.....2
- PARTS AND FEATURES5
- BEFORE FIRST USE6
- USING YOUR BREAD TOASTER.....6
 - Using the Defrost Function7
 - Using the Reheat Function.....7
 - Using the Bagel Function8
- TIPS AND TRICKS8
- CLEANING AND MAINTENANCE9
 - Cleaning the Slide-Out Crumb Tray.....9
 - Cleaning the Glass Panel10

IMPORTANT SAFEGUARDS

When using this electrical appliance, basic safety precautions should always be followed:

1. Read all instructions before operating the toaster for the first time. Please keep these instructions in a safe place, and ensure you include them if you pass the toaster on to a new owner.
2. This appliance is intended for private domestic use only. It is not intended for commercial, industrial or trade use.
3. Do not use the appliance for other than intended or specified purposes.
4. To avoid electrical shock, do not place the cord, plug or toaster in water or other liquids.
5. Do not operate appliance with wet hands or operate in a wet working environment.
6. Do not let the power cord hang off the edge of the table or counter or come in contact with hot surfaces.
7. Do not place the toaster on near a hot surface.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
9. Unplug appliance from outlet when not in use.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have

been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

11. Children should be supervised to ensure that they do not play with the appliance.
12. Do not move the toaster while it is switched on.
13. Do not place any objects such as toast, bread or similar on top of your toaster when in use.
14. Operate the toaster on a flat level surface.
15. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
16. Do not leave your toaster unattended when in use.
17. Do not allow crumbs to accumulate in the crumb tray by cleaning tray regularly.
18. Do not toast dry items that may be flammable as they could on fire.
19. Never attempt to extract jammed toast, crumpets or muffins with a knife or any metal object, as contact with the live element may cause electrocution.
20. The temperature of accessible surface may be high when the appliance is operating.
21. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
22. This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be

transported in the future, and you can use it to store the appliance when it is not in use. In the event the carton is to be disposed of, please recycle all packaging materials where possible. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.

**SAVE THESE INSTRUCTIONS.
FOR HOUSEHOLD USE ONLY.
NOT FOR COMMERCIAL USE.**

PARTS AND FEATURES



- | | | | |
|---|----------------|----|---------------------------------------|
| 1 | Toasting Slots | 6 | Bagel Button |
| 2 | Carrier Lever | 7 | Cancel Button |
| 3 | Glass Panel | 8 | Browning Dial |
| 4 | Defrost Button | 9 | Glass Panel Clamp |
| 5 | Reheat Button | 10 | Slide-Out Crumb Tray
(not visible) |

BEFORE FIRST USE

Remove all packaging material and stickers from your toaster.

Clean the appliance and all of its components prior to assembly and use.

Make sure loose objects have not fallen inside the Toaster.

In order to eliminate any manufacturing residues, turn on the toaster without bread and set the Browning Dial to level 4. The appliance may give off some smoke, which is perfectly normal.

USING YOUR BREAD TOASTER

1. Place the toaster on a clean and stable surface. Make sure that no liquid or flammable objects are near it.
2. Plug the toaster into a powered outlet.
3. Place bread slices in the toasting slots. Press the carriage lever down until it locks into place to start the toasting process.

NOTE: *The carriage lever will not click into place if the toaster is not plugged in.*

4. Turn the browning dial to the desired level from 1 to 7. The higher the number, the more toasted your bread will be. You can stop the toasting process at any time by simply pressing the Cancel button.

5. Always unplug the appliance after use and let it cool down before cleaning or storing. When storing the toaster, wind the power cord around the hooks located at the bottom of the appliance.

WARNING: *Never stick your bare hands in the toaster to remove food.*

Using the Defrost Function

Thoroughly toasts frozen bread with an extended toasting cycle.

1. Place bread slices in the toasting slot(s).
2. Press the carriage lever down until it locks into place.
3. Press the **Defrost** button. The **Defrost** button will illuminate.

NOTE: *The bread will be defrosted and toasted in the same cycle.*

Using the Reheat Function

Reheats already toasted bread or toasts bread that is not browned enough.

1. Place bread slices in the toasting slot(s).
2. Press the carriage lever down until it locks into place.
3. Press the **Reheat** button. The **Reheat** button will illuminate.

Using the Bagel Function

Toast bagels with only the outer heating elements. Make sure the inside of the bagel is facing the front window or back wall.

1. Place bread slices in the toasting slot(s).
2. Press the carriage lever down until it locks into place.
3. Press the **Bagel** button. The **Bagel** button will illuminate.

TIPS AND TRICKS

- If the bread is too small to be removed from the toasting slots, simply lift the carriage cover to raise the carriage to its uppermost position and then pick up the toasted bread. If you still cannot carefully take out the bread, unplug your toaster and use thin heat-resistant tongs to remove the bread from the toasting slots.
- Do not touch the metal parts as they will be hot!
- For pop tarts or frozen waffles, toast as directed.
- ONLY toast food that is meant to be toasted in a slot toaster.
- If the toaster jams, the bread might be too thick. Remove the bread from the toaster and slice it thinly.

NOTE: *If the carriage lever does not stay down, the glass panel clamp is not properly inserted all the way in. Make sure the glass panel clamp is fully and securely inserted.*

CLEANING AND MAINTENANCE

DO NOT SUBMERGE the unit in water. Instead, use a damp cloth to wipe down the surface of the Toaster. Clean the slide-out crumb tray with warm water and mild dish soap. Rinse and dry thoroughly with a lint-free cloth. **Caution:** Be sure to clean the slide-out crumb tray regularly to prevent crumbs from accumulating at the bottom of the toaster.

- Before cleaning your Toaster, unplug the appliance and let it cool down completely.
- Do not use abrasive scrubbers, sponges, or chemical cleaners to clean your appliance as this may damage it. Instead, use a damp cloth to wipe down the surface of your toaster
- When not in use, store your toaster in a clean, dry place.

Cleaning the Slide-Out Crumb Tray

- Remove the slide-out crumb tray located at the bottom of the toaster by sliding it out from the side.
- Wash the tray with warm, soapy water. Rinse and dry thoroughly before returning the tray to its slot. When reinserting, push the tray in until you feel it click into place.
- To avoid any lingering food odors, remove and clean the slide-out crumb tray after each use.

Cleaning the Glass Panel

- Make sure the slide-out crumb tray is empty. Turn the toaster upside down or on its side. Pull the glass panel handle underneath the toaster to slide the glass panel out.
- Carefully wash the glass panel in warm, soapy water. Rinse and dry thoroughly. Slide the glass panel back into its grooves until the glass panel clicks into place.

WARRANTY TERMS AND CONDITIONS

ONE-YEAR LIMITED WARRANTY ON PARTS AND LABOR

BAUMANN LIVING provides a warranty to the original purchaser of this product against defects in materials and workmanship for one year. If a product covered by this warranty is determined to be defective within the warranty period, **BAUMANN LIVING** will repair or replace the defective part with a new or remanufactured part free of charge subject to terms and conditions stated herein.

To obtain warranty service, proof of purchase in the form of a sales invoice or copy thereof is required to show that a product is within the warranty period. If any one of the documents cannot be produced, corresponding fees for labor and replacement parts will be charged.

Parts and Labor

There will be no charge for parts and labor during the warranty period. Replacement parts or units may be new or recertified and are upon **BAUMANN LIVING's** option and sole discretion. Replacement parts and units are warranted for the remaining portion of the original warranty. Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to abide by such decision. Any unit or defective part that have been replaced shall become **BAUMANN LIVING's** property. After the lapse of this warranty, a charge will be made on all labor and replacement of parts.

Types of Services

Defective Products must be sent to any **BAUMANN LIVING** service center to obtain warranty service. **BAUMANN LIVING** is neither responsible for transportation costs to the service center nor **BAUMANN LIVING** will cover return shipping to the customer. Product returns to **BAUMANN LIVING** service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection.

For home service, the transportation fee of **BAUMANN LIVING** service personnel will be charged to the customer, depending on the location. Our service personnel reserve all rights to refuse to attend to any equipment installed in an inaccessible location or any other hazardous situation.

LIMITATIONS AND EXCLUSIONS

BAUMANN LIVING one-year limited warranty only covers defects in materials and workmanship; however, this warranty does not cover the following:

1. Damage resulting from accidents, transport, misuse, abuse, alteration, tampering, or failure of the purchaser to follow normal operating procedures outlined in the user's manual.
2. Damage caused by negligence and poor maintenance.
3. Defects or damage due to spillage of food/liquids or improper usage of electrical supply or electrical circuit, major fluctuations in voltage, exposure to rain or moisture, wrong fuel or oil used.
4. Damage, losses, and defects as a result of fire, flood, or other Acts of God.

5. Normal wear-and-tear, corrosion, rusting, or stains.
6. Defects & damage arising from improper testing, operation, usage of the wrong component, demonstration, maintenance, installation, adjustment, or any alteration or modification of any kind.
7. Scratches & damage to the outer surface areas and externally exposed parts that are due to normal customer use.
8. General maintenance & routine servicing.
9. Claims for damaged/missing parts after 7 days from the date of purchase.
10. If any part or parts of the unit are replaced with a part or parts not supplied or approved by us, or if the unit has been dismantled or repaired by any person other than a **BAUMANN LIVING** authorized technician.
11. Any equipment/product which has its serial number removed or made illegible/tampered with.
12. If the warranty card is altered, defaced, or erased in any manner whatsoever.
13. If the unit is used for purposes other than household use, such as commercial use.

The one (1) year warranty covers the mainboard and control PCB, motor, heating element, boiler and power supply. However, this warranty does not cover parts (i.e. accessories, filter, glass carafe, heating and grill plates, glass lid, pot, wire racks, drip tray, glass and plastic jar, blades, cutter, baskets, glass bowl, handle, trays, fuse, coffee holder, water and milk tank, silicon tubes, belts, gaskets, rubber connectors, gears, glass door, bulb, handle, interior and exterior casing) that are subject to wear and tear, rust, stains, or corrosion.

This one-year limited warranty does not cover Products sold **"AS IS"**, **"FACTORY RECTIFIED"**, or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. **BAUMANN LIVING'S** TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING **BAUMANN LIVING'S** NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. **BAUMANN LIVING** SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

IMPORTANT: Please present sales invoice as proof of purchase whenever you require our service during the warranty period.

www.baumannliving.com